## DISTRICT


Collection: Cason
Installation manual for:

LD6185BR W6"H12"E6.8" L1

## Installation instructions:

- 1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 4. Secure mounting bracket to the junction box.
- 5.Insert screws (P4) in side of top unit the mounting bracket.
- 6.Put the canopy (P5) on the mounting bracket(P1) and tighten it with a nut (P6).
- 7.Install E12 light source, no include bulb.
- 8.Install the shade (P12) to the bulb.

## The end!

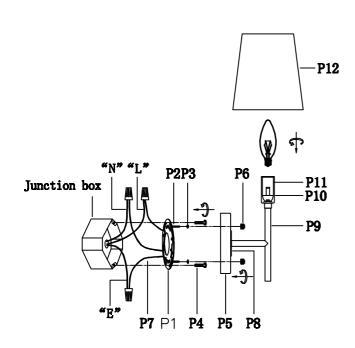

## PARTS LIST

part	picture	Description	Qty	Check list
P1	8	D4" Mounting bracket	1	
P2		5/82-32 Serew	2	
Р3	<b>©</b>	Bex nut	2	
P4		5/32-32 Screw	2	
P5		D4.75" Canopy plat	1	
P6		Cap mut	2	
P7	~	Power Cord L1.5' 1332 18ANG BlackWhite	1	
P8	0	D2" Round flat gasket	1	
P9		L6. 1" Arm	1	
P10		Socket cover	1	
P11		E12 Socket	1	
P12	M	D6"496" Lamp shade	1	
		<u> </u>	<u> </u>	

"L" = Hot wire

"N" = Neutral wire

"E" = Ground wire