

House Numbers

Specs & Mounting Template


INSTRUCTIONS:

Elevated:

1. Determine desired location and using template , mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

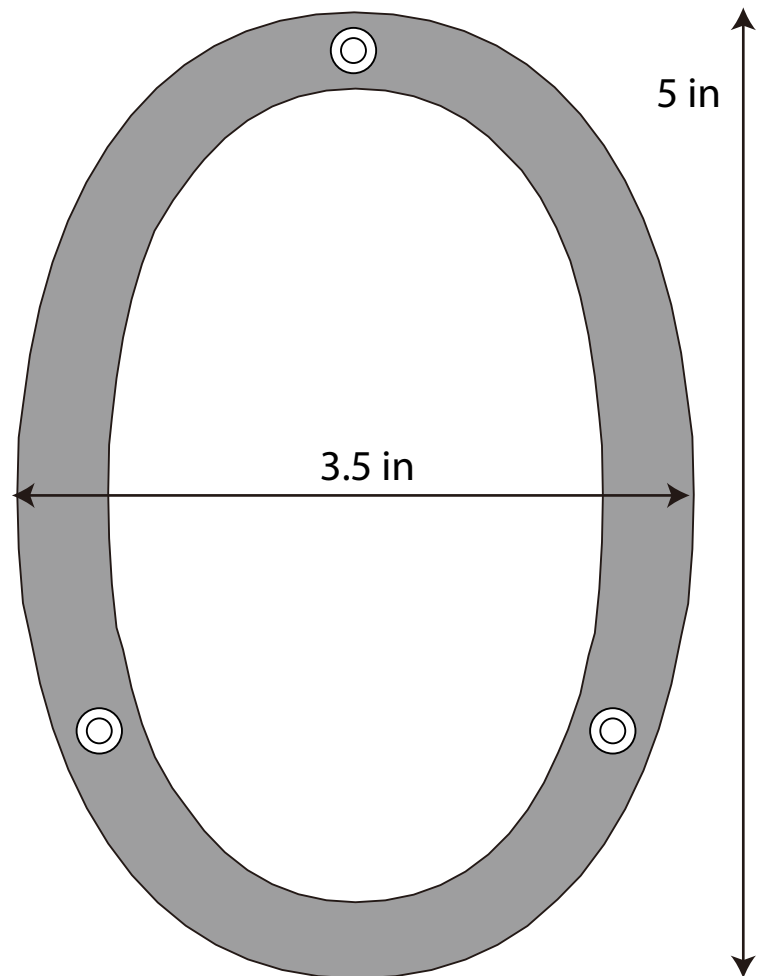

House Numbers

Specs & Mounting Template



INSTRUCTIONS:

Elevated:

1. Determine desired location and using template , mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

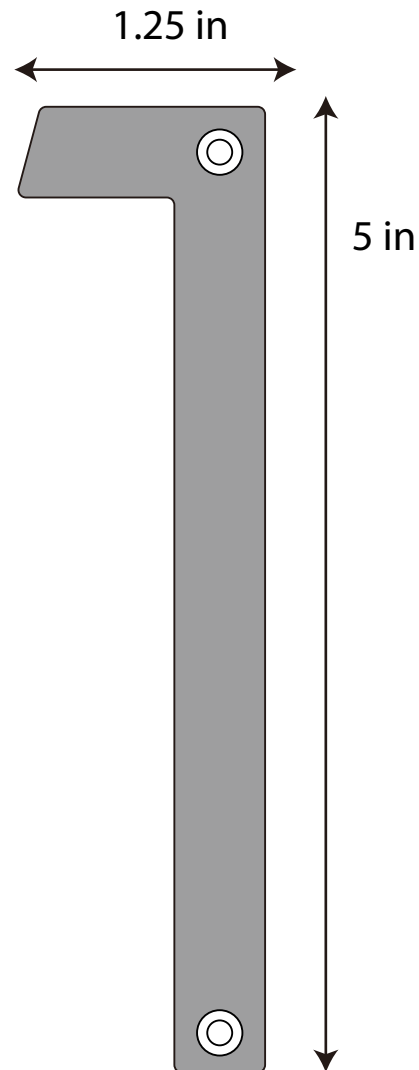

House Numbers

Specs & Mounting Template


INSTRUCTIONS:

Elevated:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

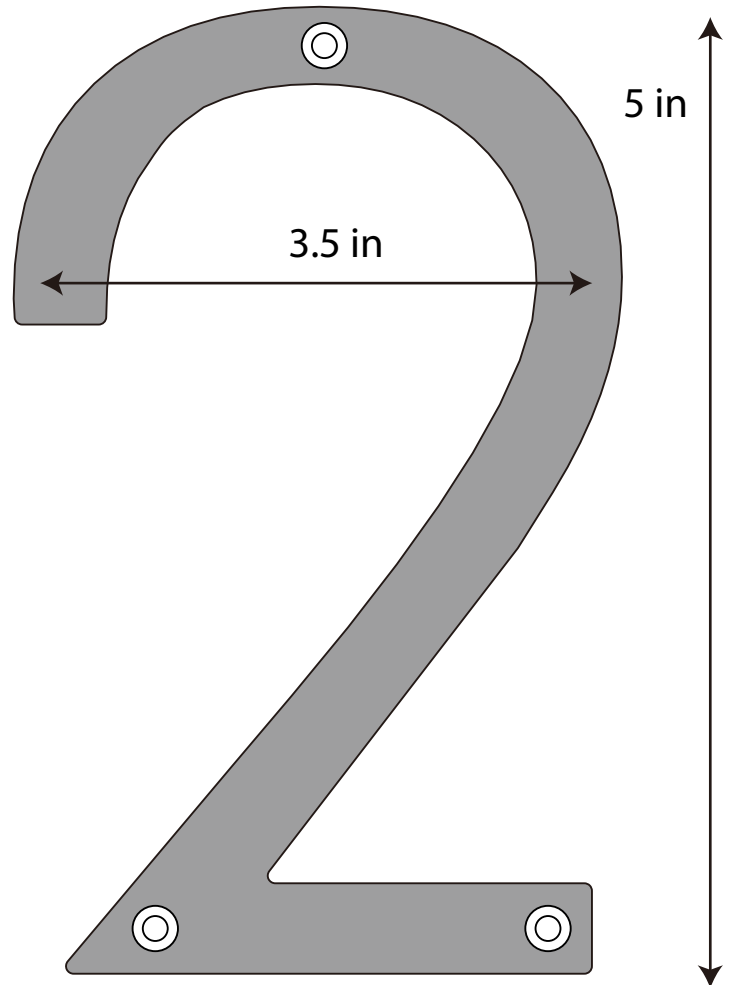

House Numbers

Specs & Mounting Template


INSTRUCTIONS:

Elevated:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

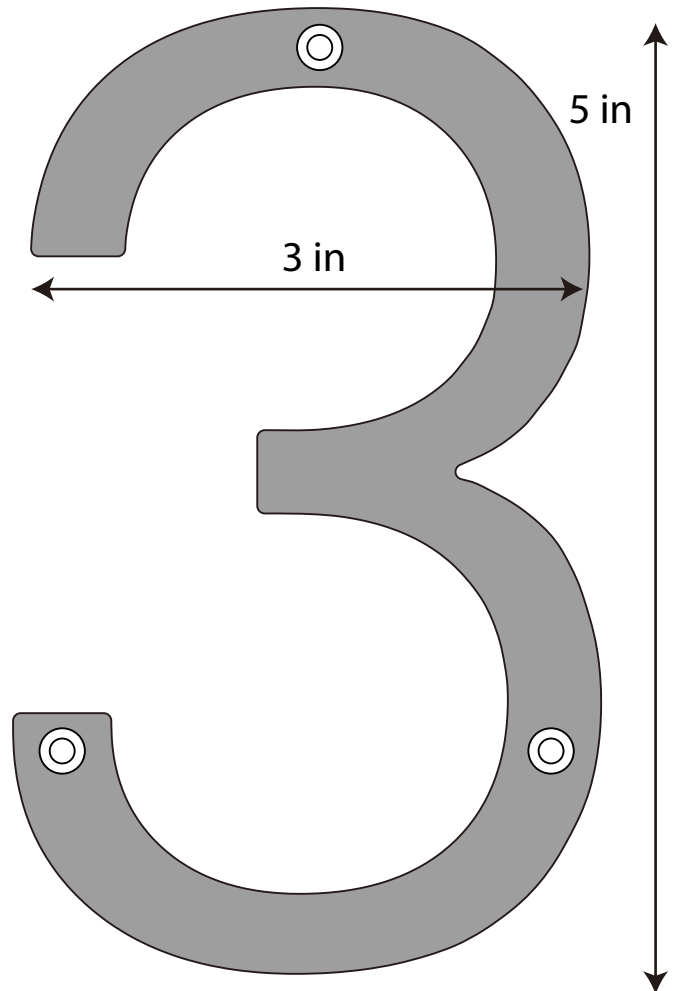

House Numbers

Specs & Mounting Template



INSTRUCTIONS:

Elevated:

1. Determine desired location and using template , mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

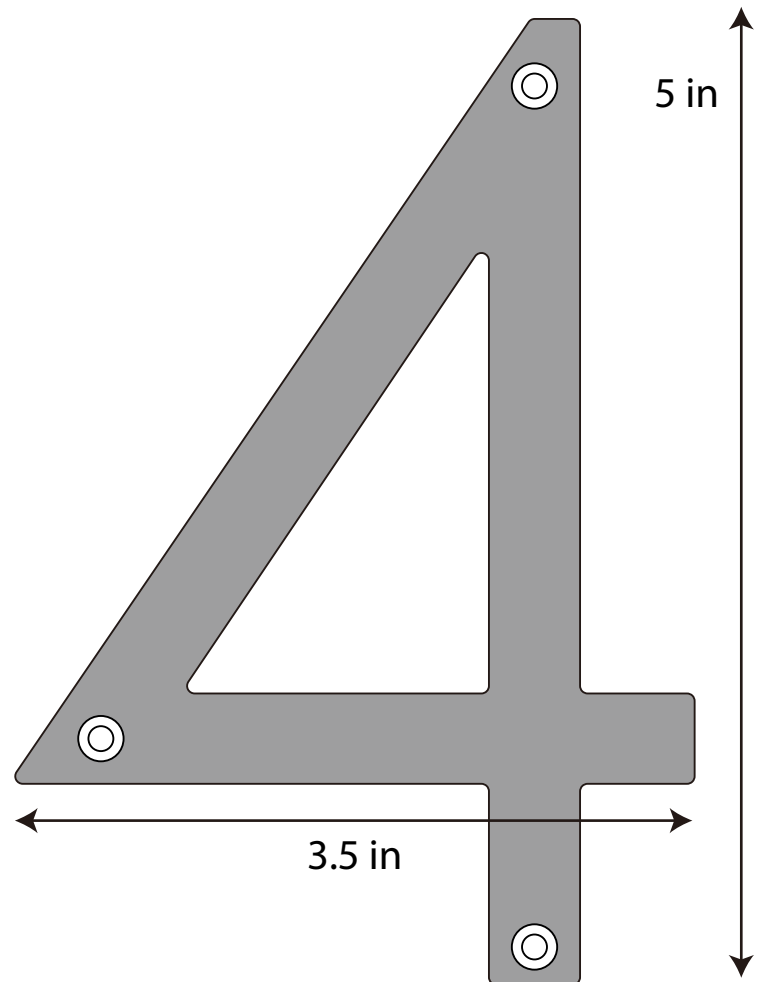

House Numbers

Specs & Mounting Template


INSTRUCTIONS:

Elevated:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

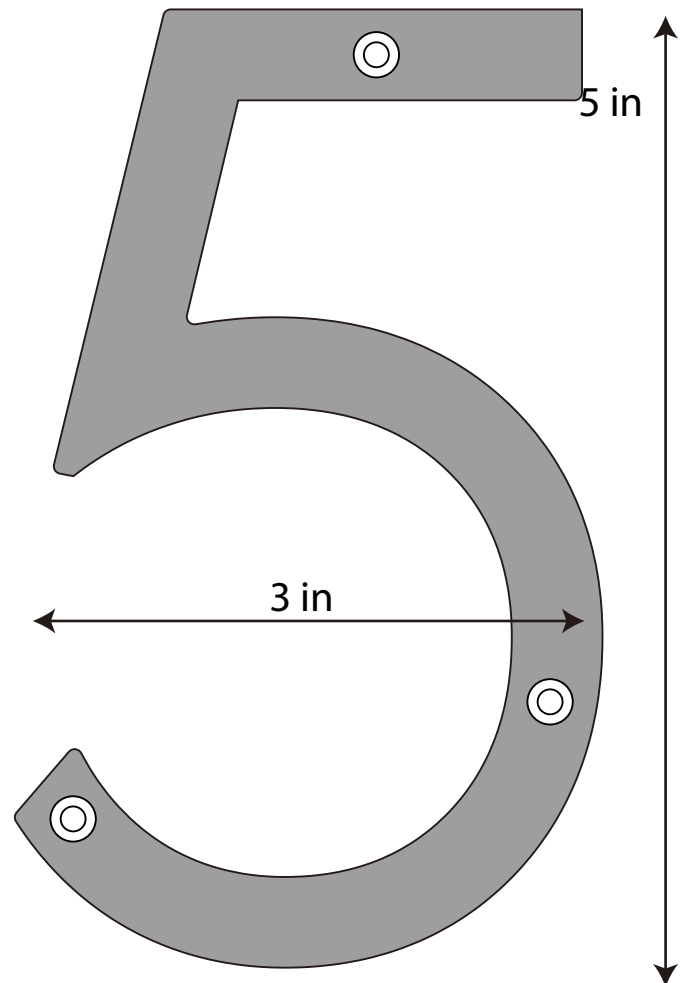

House Numbers

Specs & Mounting Template



INSTRUCTIONS:

Elevated:

1. Determine desired location and using template , mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

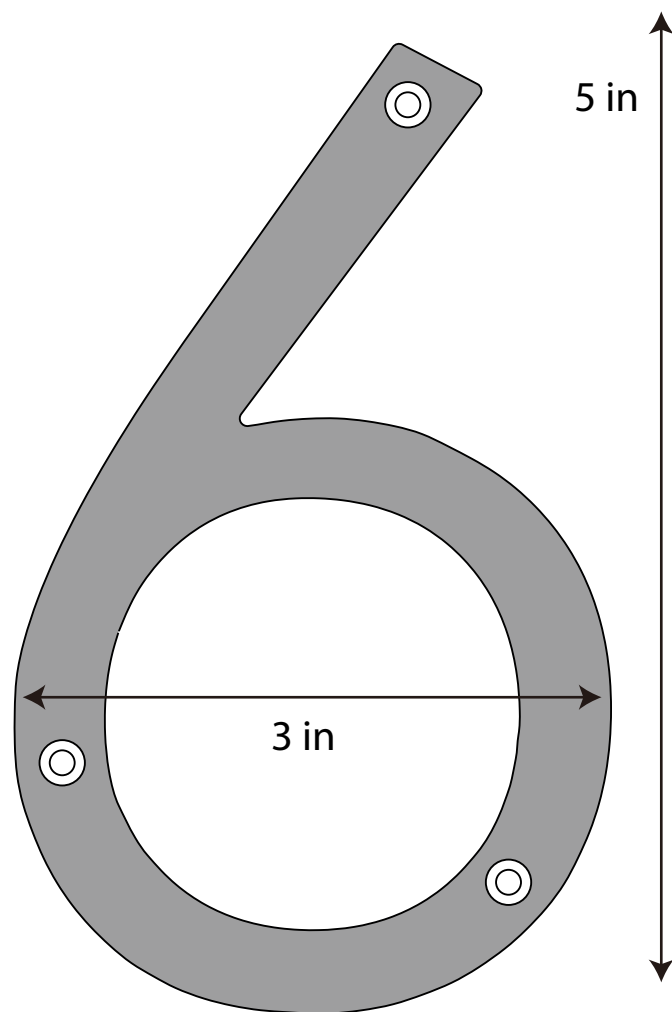

House Numbers

Specs & Mounting Template



INSTRUCTIONS:

Elevated:

1. Determine desired location and using template , mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

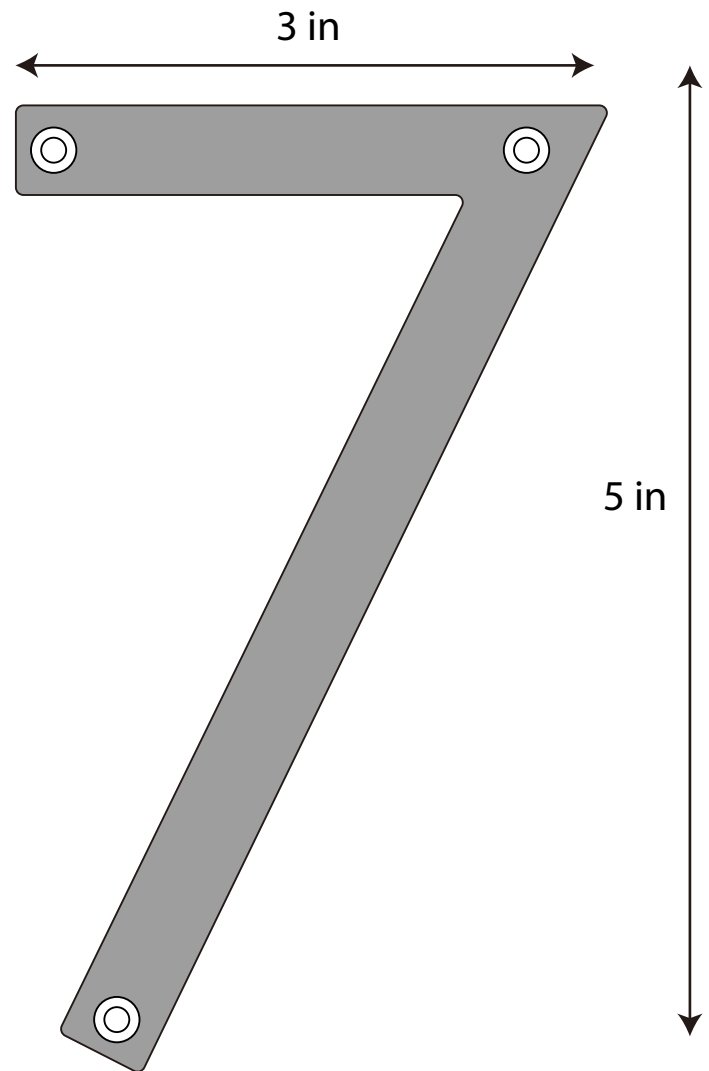

House Numbers

Specs & Mounting Template


INSTRUCTIONS:

Elevated:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

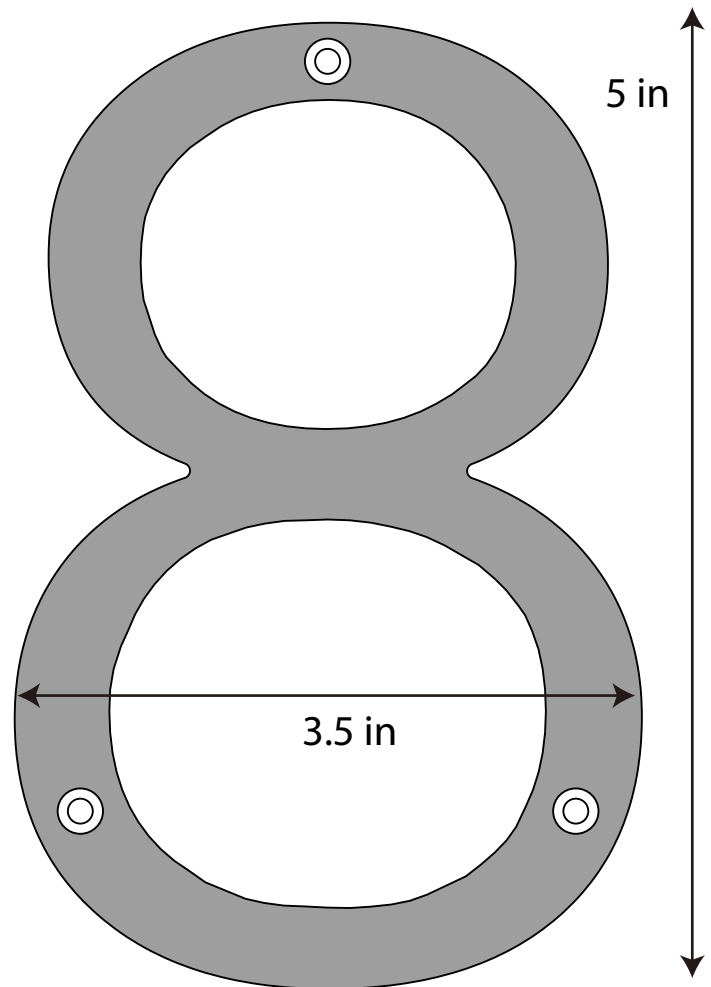

House Numbers

Specs & Mounting Template


INSTRUCTIONS:

Elevated:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

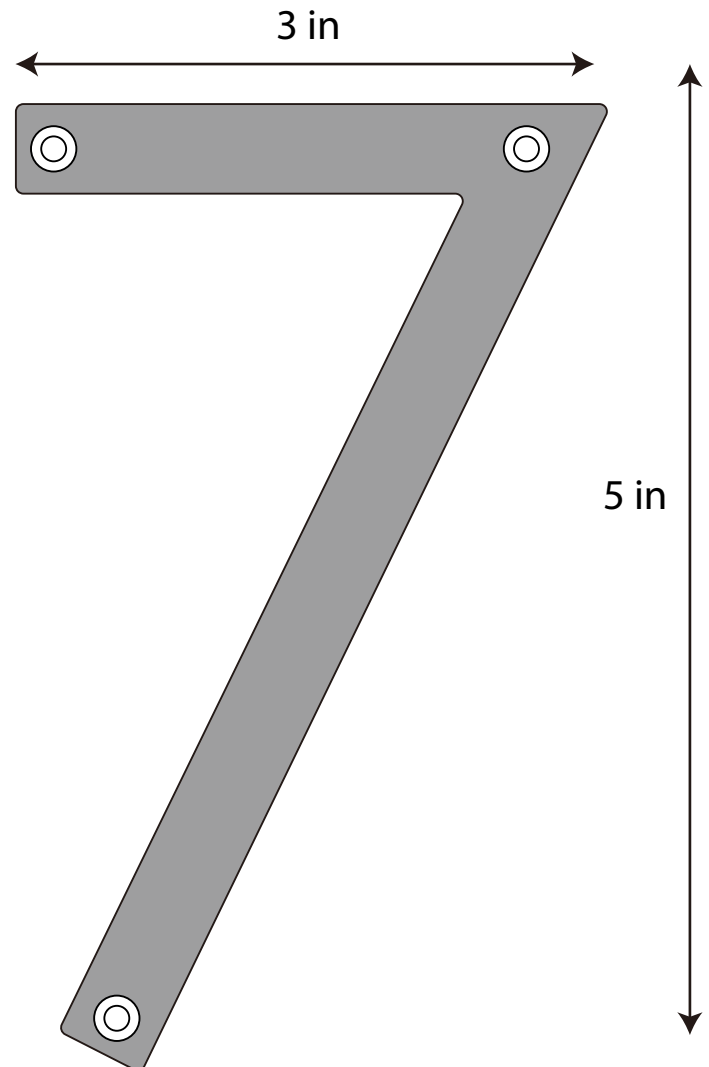

House Numbers

Specs & Mounting Template

INSTRUCTIONS:

Elevated:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Slide on spacers
6. Align screws with anchors and press into place using a rubber mallet

Flush:

1. Determine desired location and using template, mark screw locations.
2. Drill holes for anchors using a 7/32 in drill bit.
3. Install anchors
4. Insert end of threaded rod into number
5. Align screws with anchors and press into place using a rubber mallet

