




# INSTALLATION INSTRUCTIONS


## FOR COVERED SCREW PASSAGE AND PRIVACY KNOBS

### PARTS

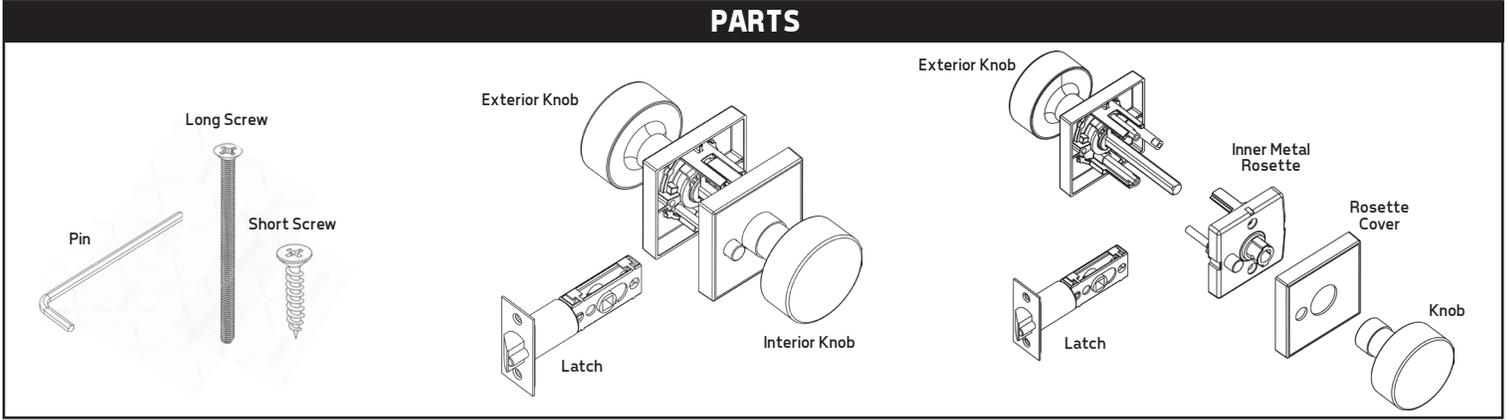


### STEP 1

Install the latch onto the door and ensure that the hole is centered. Use the shorter screws.

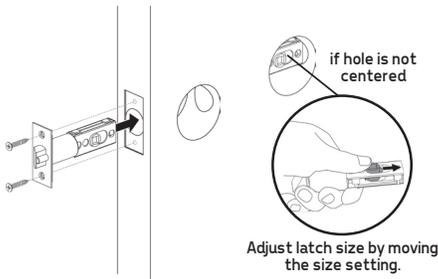


### STEP 2

Unscrew the knob and the rosette cover from the interior knob using the pin included.

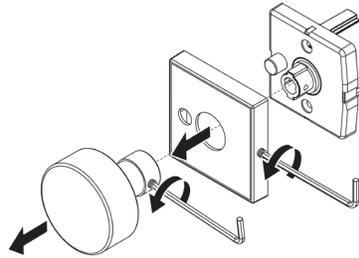


### STEP 3

Connect the exterior knob with the inner metal rosette through the latch.

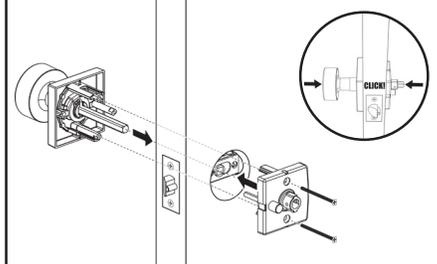


### STEP 4

Drill with the long screws to secure.

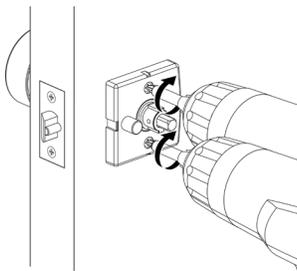


### STEP 5

Reconnect the rosette cover and knob using the pin included.

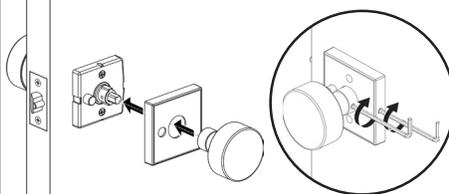


### STEP 6

Test the knob to ensure that all parts work together correctly.

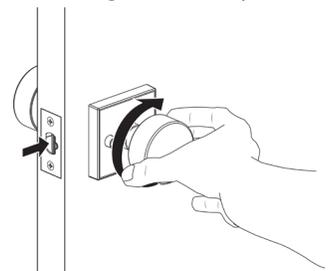

### HANDLE LOCK INSTALLATION TEMPLATE

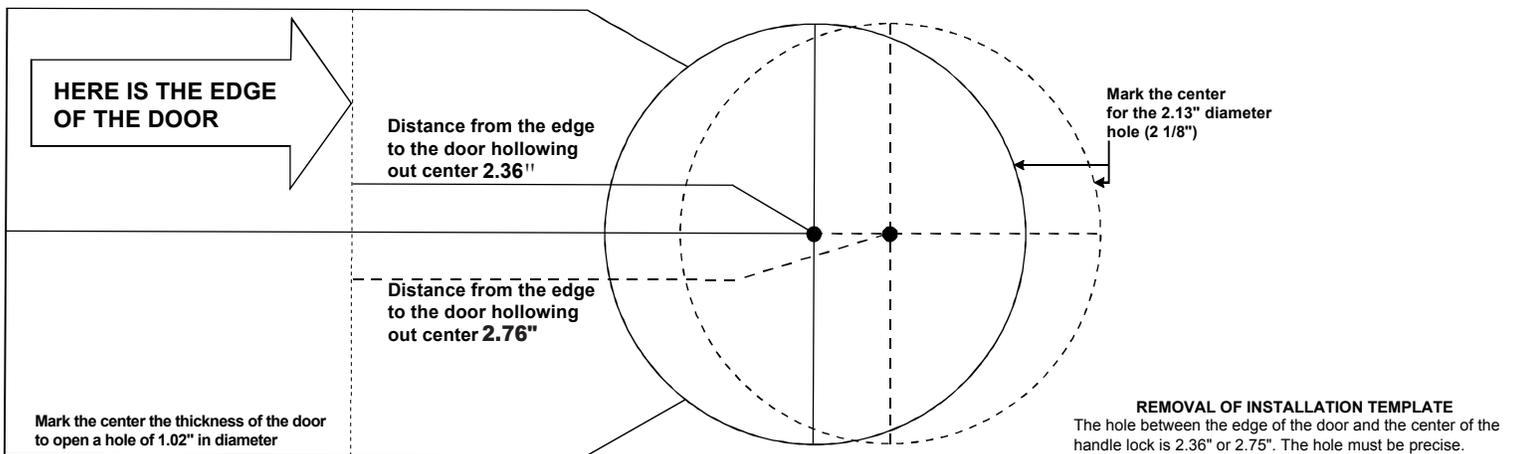

**REMOVAL OF INSTALLATION TEMPLATE**  
 The hole between the edge of the door and the center of the handle lock is 2.36" or 2.75". The hole must be precise. The operation of the lock depends on it.